

## F.A.Q

### What factors affect tire wear?

Driving habits and the road conditions can affect the wear of your tires, as well as over- or under-inflation, improper alignment setting, improper balance, and spring or shock wear.

### How often should my tires be rotated?

On average, tires should be rotated every 5,000 miles.

### When should I replace my tires?

Tires must be replaced whenever there is 2/32 of an inch of tread or less remaining on the tire.

### How often should I have my tires inspected?

Check tire pressure once a month and have your Toyota Assistant Service Manager inspect your tires when you are in for service.